




# CLAVERRACK RURAL ELECTRIC COOPERATIVE, INC.

32750 ROUTE 6  
WYSOX, PENNSYLVANIA 18854  
www.claverack.com --- 1(800) 326-9799

## Solar Interconnection Specifications

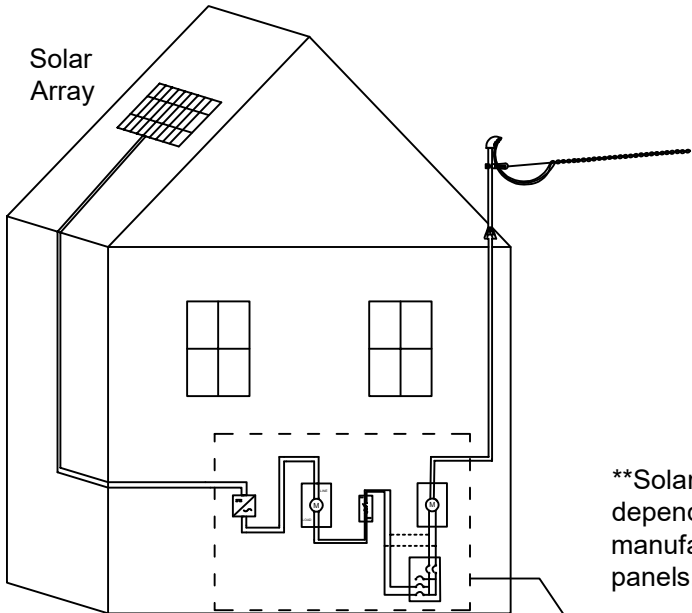

1. Line side of the dedicated/production meter to be connected to the output of the inverter. Load side of the dedicated meter to be connected to the load side of the disconnect switch.
2. The disconnect switch must be a visibly open and lockable switch.
3. Line side of net meter to be connected to grid.
4. Service panel is typically located inside the house.

\*\*Solar configuration will vary depending on equipment manufacturer and location of solar panels.

